

ACCESSORIES

ELECTRIC PRESSURE WASHERS

With Kärcher original accessories, you can optimize the cleaning power and extend the use of your electric pressure washer. Accessories are the ideal solution for specific tasks such as cleaning vehicles, wood decks, driveways and even blocked pipes! Not only do they help reduce the cleaning time - they also deliver more polished and professional results.



*Cleaning a large area such as a deck with regular spray wand can be time consuming and may leave behind streaks. The T300 cleans an 11" area with every pass and eliminates streaks by keeping its nozzles at a fixed height from the surface. **Safe to use on wood and composite decks.***



The hard surface PS40 Power Scrubber has three integrated high pressure nozzles and a stiff bristle design for removing stubborn dirt and stains quickly and efficiently. Suitable for a wide variety of hard surfaces and ideal for scrubbing concrete, pool areas, steps and hard to reach areas.



The Chassis Cleaner is designed to reach the underside of vehicles and remove corrosive sediments. A build-up of salt, oil, or mud can cause severe long term damage to any vehicle if left untreated. The Chassis Cleaner is designed with spinning dual upward pointing spray nozzles to safely clean.

NAME T300 Deck+Driveway Cleaner
Part Number 2.643-211.0

NAME PS40 Powerscrubber
Part Number 2.642-582.0

NAME Chassis Cleaner
Part Number 2.642-561.0



An ideal accessory for cleaning wheel rims and spokes. The high quality bristles clean hard to reach wheel areas on vehicles, motorcycles, bicycles and more. The ergonomic handle automatically dispenses detergent reducing the amount of time it takes to get your wheels clean.



Ideal for cleaning wheel wells, vehicle roofs, and other hard-to-reach areas. The 90° angle on the end of this metal wand (30" long assembled) makes it easy to clean the roof area of trucks and SUV's. Great for cleaning gutters when paired with a Kärcher extension wand.



Increase your reach by up to 66" with this extension wand. Four aluminum sections combine to create lengths of 33", 51" or 66" fully assembled. Attaches easily and securely to the trigger gun of your Kärcher pressure washer.

NAME Wheel Rim Brush

Part Number 2.642-186.0

NAME Right Angle Wand

Part Number 2.640-741.0

NAME Four Piece Extension Wand

Part Number 2.640-746.0



Replacement trigger gun for Kärcher electric pressure washers with Quick Connect.



The DirtBlaster® uses patented technology to increase the effective pressure of your Kärcher electric pressure washer by up to 80%. It is ideal for areas where more intense cleaning is needed. Included with most electric pressure washers.



Allows you to easily switch between low and high pressure, and everything between, while you clean. Automatically dispenses detergent at the low pressure setting. Included with most electric pressure washers.



Connects directly with Quick Connect to the high pressure water outlet on your pressure washer and to your existing high pressure hose on the other end. Fits most Kärcher electric pressure washers up to 2000 PSI.

NAME Trigger Gun - Quick Connect

Part Number 2.642-581.0

NAME DirtBlaster® Wand

Part Number 2.642-863.0

NAME VarioPower Wand (VPS)

Part Number 2.642-888.0

NAME 25ft Extension Hose - QC

Part Number 2.642-588.0

ACCESSORIES

ELECTRIC PRESSURE WASHERS



The pipe cleaner uses four backward firing high pressure water jets to propel itself through pipes to break up and evacuate built-up debris and grime. The kink resistant flexible hose includes measurement markings and a ring to indicate progress. Connect directly to the trigger gun.



Replacement hose for Kärcher electric pressure washers **with hose reels.**



25 ft. Quick Connect high-pressure hose securely attaches to the trigger gun. Includes a Quick Connect adapter for rapid attachment of the high-pressure hose. Trigger Gun is designed to work with Kärcher electric pressure washers up to 2000 PSI.

Note: Not compatible with pressure washers with an onboard hose reel.

	NAME	25ft Pipe Cleaning Hose	25ft Replacement Hose - QC	25ft Replacement Hose/Gun
Part Number		2.642-183.0	2.642-583.0	2.642-708.0



Includes rotating brush, soft bristle brush and adapters that are compatible with all Kärcher pressure washers, as well as most brands of gas pressure washers.



Made with extra soft synthetic bristles that are safe for all painted surfaces. Automatically dispenses detergent to help remove dirt and grime. Ideal for use on cars, trucks, motorcycles, boats, patio furniture and other delicate surfaces. Easily attaches to the trigger gun. Includes adapters.



Incoming water pressure causes inner brushes to rotate, providing the right amount of agitation to easily remove stubborn dirt and debris. Detergent dispenses through the brush for effortless cleaning of most flat surfaces. Includes adapters.

NAME > Universal Dual Brush Kit

Part Number 8.923-681.0

NAME > Universal Standard Brush Kit

8.923-683.0

NAME > Universal Rotating Brush Kit

8.923-682.0



Easily replace your pressure washer's O-rings. Set includes O-rings for the high pressure hose and attachments including spray wands, brushes and more.



Use to replace the garden hose quick connect adapters on electric pressure washers. Also can be used to convert threaded connectors on gas pressure washers.



Ideal for applications which require a thick foam. Simply fill the reservoir cup with liquid pressure washer detergent to generate a foam spray. Connects directly to the trigger gun.



Connects to your Kärcher pressure washer's water inlet, allowing you to use ponds, lakes, buckets, tanks and rain barrel as an alternate source of water. 9.8" (3m) length.

O-Ring Set

2.640-729.0

Quick Connect Replace Kit

2.645-221.0

Foam Nozzle

2.643-146.0

Suction Hose with Filter

2.643-101.0